

Honeywell



Quick Start Guide

Wi-Fi Touchscreen
Programmable
Thermostat

RTH8500WF Wi-Fi Series

Welcome

Getting set up and ready is simple.

- 1 Install your thermostat.
- 2 Connect your home Wi-Fi network.
- 3 Register online for remote access.

Before you begin



View the installation video at wifithermostat.com/support



Gather


- Small screw driver
- Thermostat ID card
- Your home Wi-Fi network password

1 Install your thermostat

1.1 Switch OFF power to your heating/cooling system


1.1a **Important!** To protect your equipment, switch OFF the power to your heating/cooling system at the breaker box or the system switch.

1.1b Confirm power is OFF. Try to turn on heating/cooling equipment by changing temperature on your old thermostat. Your power is OFF if your system does not turn ON.

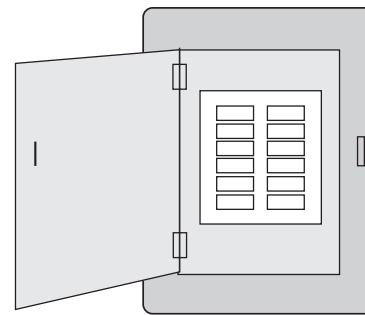

Circuit
breaker
box

or

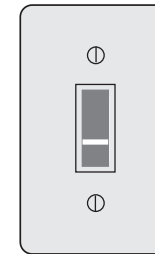

Heating/cooling
system power
switch



This thermostat works with common 24 volt systems such as forced air, hydronic, heat pump, oil, gas, and electric. It will not work with millivolt systems, such as a gas fireplace, or with 120/240 volt systems such as baseboard electric heat.

1.2 Remove old thermostat faceplate and leave wires connected



1.2a Take a picture of the wire connections for later reference.




1.2b If no wire is connected to a terminal labeled C or no C terminal exists on the old thermostat, view the Alternate Wiring videos at wifithermostat.com/videos

Important! C wire is required and is the primary power source for your thermostat. Without a C wire, your thermostat will not power up.



If you have an older thermostat with a sealed mercury tube, see warning page for proper disposal instructions.

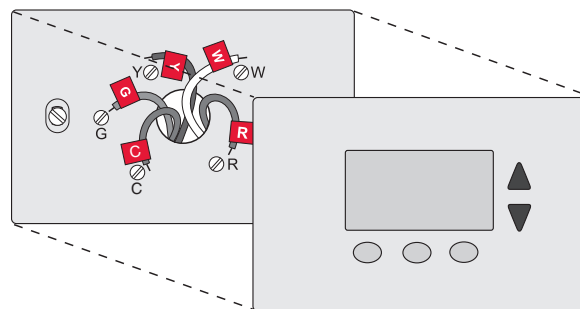

1.3 Label wires

Do not label by wire color.

Use the supplied sticky tags to label each wire as you disconnect it. Label wires according to old thermostat terminal designations, not by wire color.

Note: If no tag matches a terminal designation, write the appropriate letter on a blank sticky tag.

1.4 Remove wallplate

Remove the old wallplate from the wall after all wires are labeled and disconnected.


Sticky tag

Wiring Labels Apply these wiring labels to each wire with the appropriate terminal designation as you remove it from the existing thermostat.	Étiquettes de fils Lorsque vous retirez les fils des bornes du thermostat existant, collez ces étiquettes sur chaque fil correspondant à la lettre de la borne.	Rótulos para los cables Coloque estos rótulos, con la designación de las terminales, en cada cable al remover los cables del termostato actual.							
B	B	Y2	Y2	C	C	E	E	F	F
G	G	H	H	L	L	O	O	P	P
R	R	RC	RC	RH	RH	T	T	U	U
V/VR	V/VR	W	W	W1	W1	W2	W2	W3	W3
X	X	X1	X1	X2	X2	Y	Y	Y1	Y1
AUX	AUX								

69-0823EFS-2 • ©05 • Printed in U.S.A.


Blank sticky tag

Terminal designation

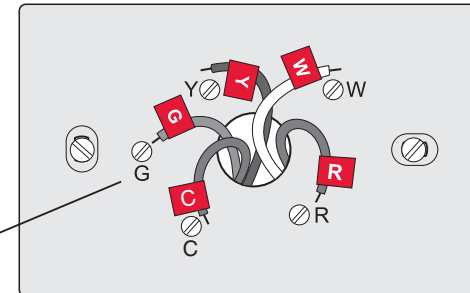

1.5 Separate Wi-Fi thermostat and its wallplate

On your new thermostat, grasp the finger holds on the top and bottom of the wallplate with one hand and the thermostat (front) with the other hand. Pull pieces apart.

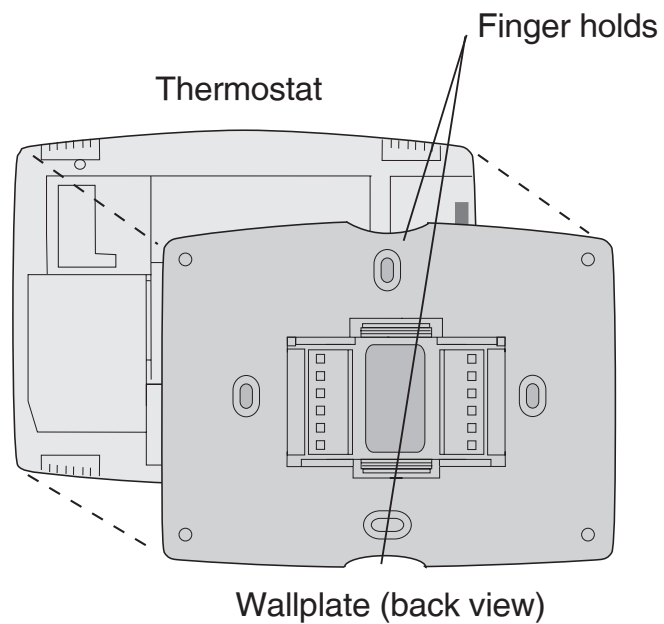


1.6 Mount wallplate for Wi-Fi thermostat

Mount your new wallplate using screws and anchors included with the thermostat.

If necessary:

- Drill 3/16-in holes for drywall
- Drill 7/32-in holes for plaster

Note: You may be able to use your existing wall anchors. Hold the wallplate up to the existing anchors to check for alignment.

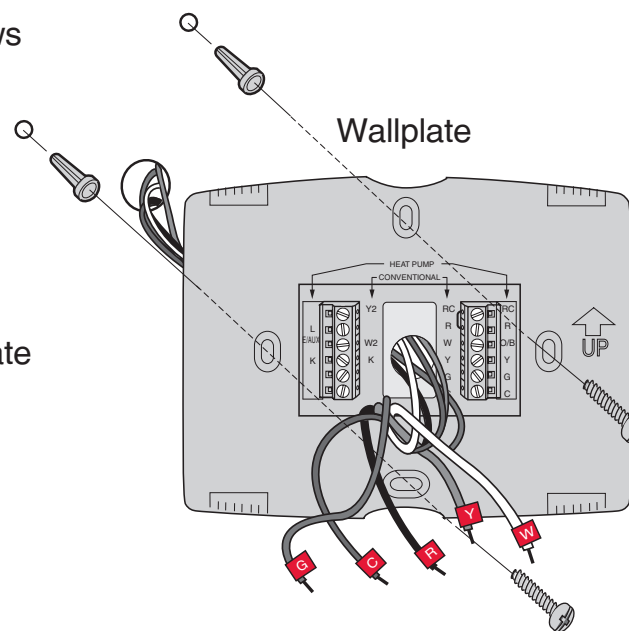

1.7 Connect wires

1.7a Starting with the C Wire, match the sticky tag on the wire to the terminal labels.

Important! C wire is required and is the primary power source. Without a C wire, your thermostat will not power up.



View the Alternate Wiring videos at wifithermostat.com/videos

1.7b Loosen screw, insert wire on inside edge of terminal, then tighten screw.

1.7c Verify wire is firmly secured by gently pulling on wire.

1.7d Repeat steps 1.7a–1.7c for all other wires.


1.7e Push any excess wire back into the wall opening after all wires are installed.



Labels don't match or have heat pump system?

See *User Guide*.

Remove metal jumper **only** if you have both **R** and **RC** wires

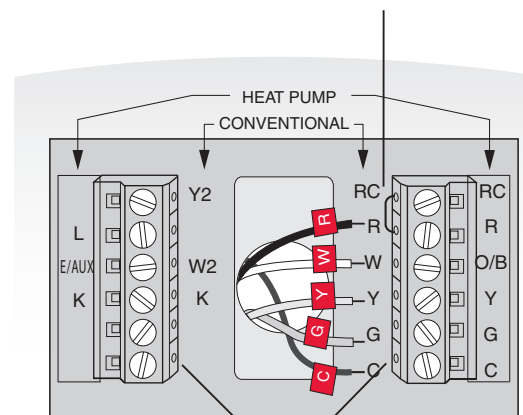

Insert wires here

Note: The wiring for your application might be different than the wiring from above.

1.8 Install battery


Insert the coin cell battery (included), observing the correct polarity.

Note: A correctly inserted battery will extend about halfway out of the battery slot on the thermostat, allowing for easier removal.


This battery maintains time and date during power outages. It does not power the thermostat (C wire required).

1.9 Attach thermostat to wallplate

Align the thermostat onto wallplate and snap into place.

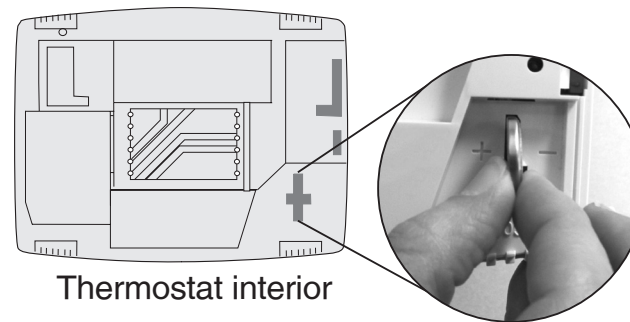

Thermostat interior

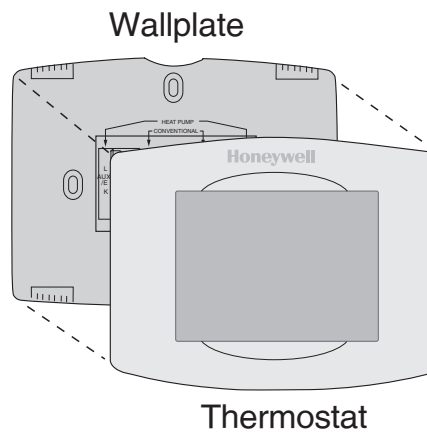


Thermostat

1.10 Switch heating/cooling system ON


Important!

- 1.10a Verify that the C wire is connected at the thermostat and at the heating/cooling system.
- 1.10b Make sure the heating/cooling system door is firmly secured.
- 1.10c Switch power back ON for your heating/cooling system at the breaker box or its power switch.

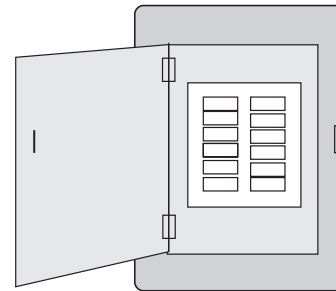

Circuit
breaker
box

or

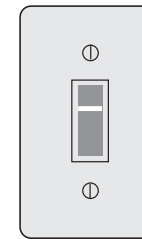


Heating/cooling
system power
switch

1.11 Set date and time

Touch ▲ or ▼ buttons to change displayed time and date.

Press and hold a button to quickly change a setting.

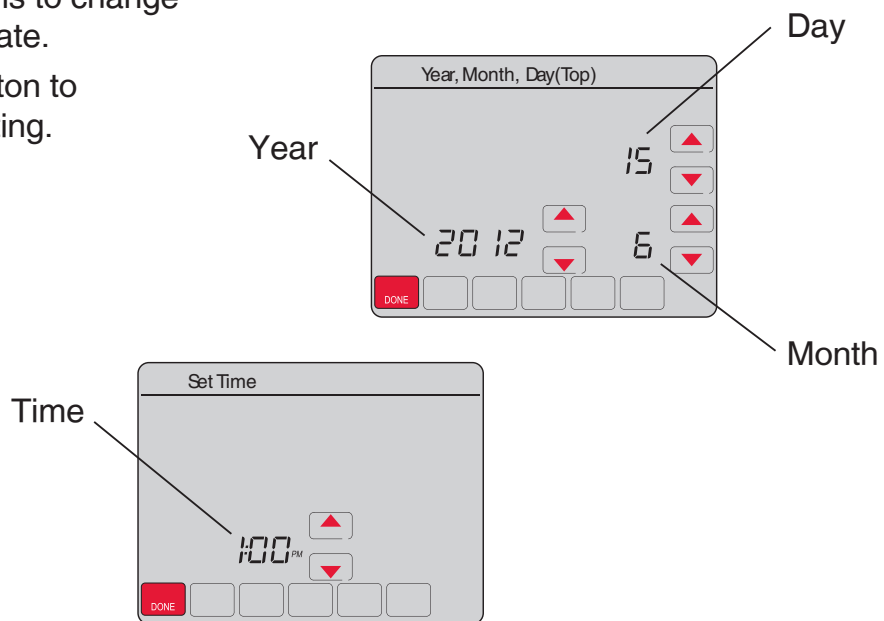

1.12 Determine your heating/cooling system type

Important! Heating/cooling system type must be set so that your thermostat operates properly and does not damage your system.

1.12a If you have a traditional system (natural gas forced air with A/C), your thermostat is set up by default to control this system.

Go to **Step ②**

1.12b If your system is:

- Multistage equipment
- Any type of heat pump
- Hydronic
- Other

You **MUST** change the system type by setting system function 0170.
See “Setting functions and options” in the *User Guide*.




Not sure of your heating/cooling system type?
Refer to FAQ on wifithermostat.com/support


1.13 Test your thermostat

Congratulations! Your thermostat is operational

1.13a Touch the **SYSTEM** button to change to heating or cooling and begin operation.

 Heating/cooling system not turning on?
Refer to User Guide or FAQ at wifithermostat.com/support

1.13b For remote access to your thermostat, continue to **Step ②**.

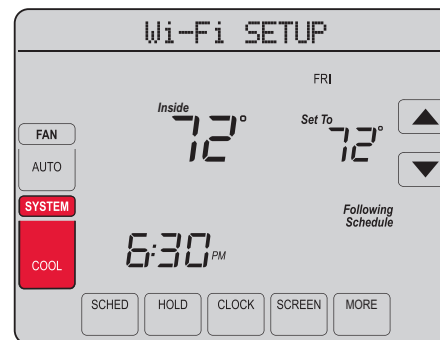

2 Connect to your Wi-Fi network

2.1 Connect to your thermostat

2.1a Connect your wireless device to your home network.

Any of these device types will work:

- Tablet (recommended)
- Laptop (recommended)
- Smartphone



View the Wi-Fi Enrollment video at wifithermostat.com/videos


Getting Help

If you get stuck... At any point in this process, restart the thermostat by removing the thermostat from the wallplate, wait for 5 seconds, and snap it back into place. Return to **2.1**.

Need more help? Find additional information in the *User Guide*.

- 2.1b Make sure the thermostat message center displays Wi-Fi SETUP.
- 2.1c On the wireless device (tablet, laptop, smartphone), view the list of available Wi-Fi networks.
- 2.1d Connect to the network called **NewThermostat_123456** (the number will vary).

Note: If you are asked to specify a home, public, or office network, select **Home Network**.

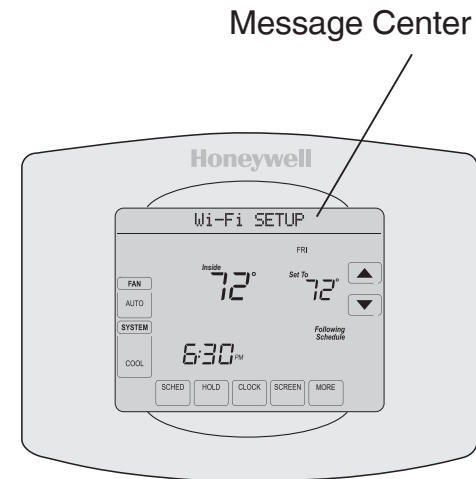

2.2 Join your home network

2.2a Open your web browser to access the Thermostat Wi-Fi Setup page. The browser should automatically direct you to the correct page; if it does not, go to <http://192.168.1.1>


2.2b Find the name of your home network on this page and select it.

Note: Some routers have enhanced features such as guest networks; use your home network.

2.2c Complete the instructions for joining your Wi-Fi network and click on the **Connect** button. (Depending on your network setup, you may see an instruction such as Enter Password for your home network.)

Note: If you did not correctly connect to the thermostat, you may see your home router page. If so, return to Step 2.1.

Thermostat Wi-Fi-Setup page

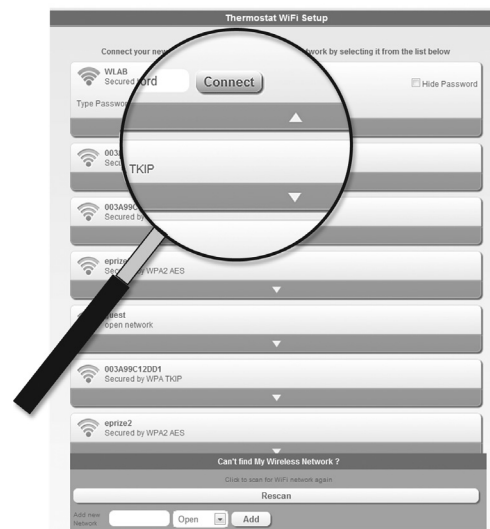


2.3 Make sure your thermostat is connected

The message center on your thermostat will now display CONNECTING... for up to 30 seconds.

2.3a Look at the thermostat display. Verify that the message center displays one of the following:
CONNECTION SUCCESSFUL
JOINED: [WI-FI NETWORK NAME]
YOU ARE ALMOST DONE
REGISTER AT TOTAL CONNECT

If you see one of these messages, continue to **Step ③**.

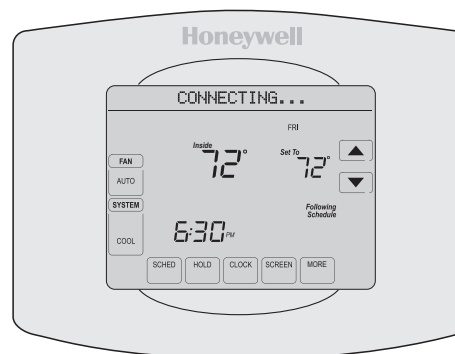

Note: If you see CONNECTION FAILURE or Wi-Fi SETUP in the message center, confirm you correctly entered your home network password in step 2.2c. If correct, refer to the FAQ at wifithermostat.com/support

3 Register online for remote access

To view and set your Wi-Fi thermostat remotely, you must have a Total Connect Comfort account. Follow the instructions below.

 View the Wi-Fi Thermostat Registration video at wifithermostat.com/videos

3.1 Open the Total Connect Comfort web site

Go to www.mytotalconnectcomfort.com



3.2 Login or create an account

If you have an account,
click **Login**

– or –

click **Create An Account**.


3.2a Follow the instructions on the
screen.

3.2b **Check your email** for a response
from My Total Connect Comfort.
This may take several minutes.

Note: If you do not receive a response,
check your junk mailbox or use an
alternate e-mail address.

3.2c **Follow activation instructions** in
the email.

3.2d Log in.

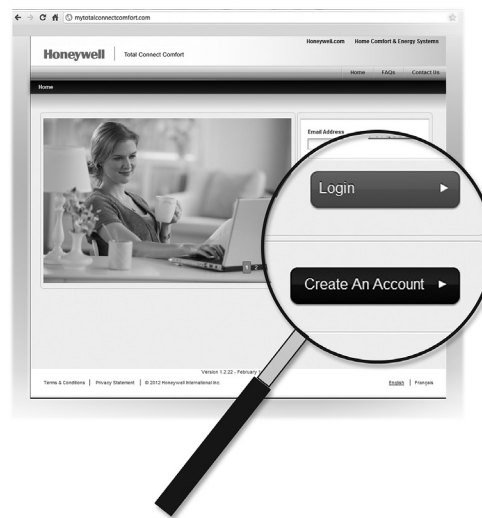


3.3 Register your Wi-Fi thermostat

After you are logged in to your Total Connect Comfort account, register your thermostat.

3.3a Follow the instructions on the screen. After adding your thermostat location you must enter your thermostat's unique identifiers:


- MAC ID
- MAC CRC

Note: These IDs are listed on the Thermostat ID Card included in the thermostat package. The IDs are not case sensitive.

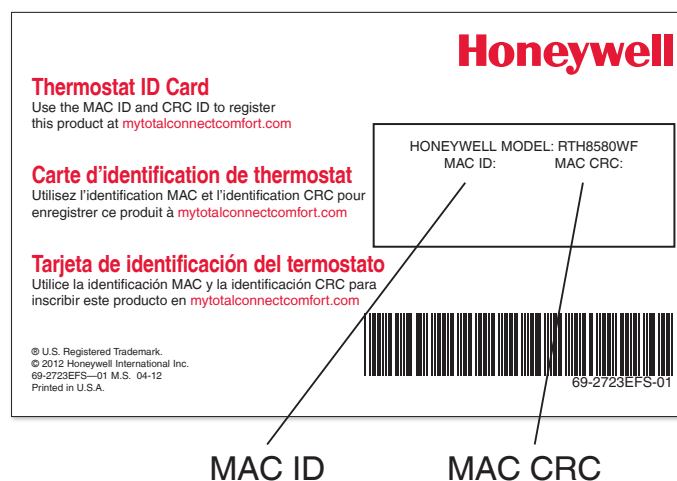


3.3b Notice that when the thermostat is successfully registered, the Total Connect Comfort registration screen will display a SUCCESS message.

In the thermostat message center you will see:
**CONGRATULATIONS
SETUP COMPLETE!**

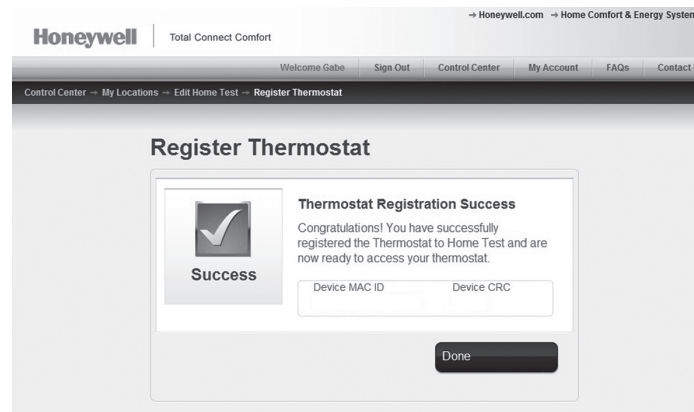

3.3c Also notice that your thermostat will now display its signal strength.

Congratulations! You're done. You can now control your thermostat from anywhere through your tablet, laptop, or smartphone.

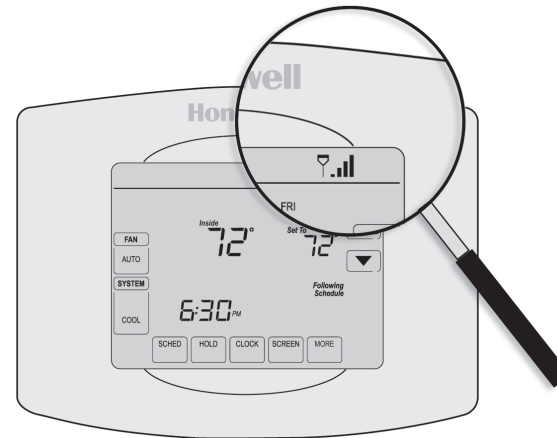

Total Connect Comfort free app is available for Apple® iPhone®, iPad® and iPod touch® devices at iTunes® or at Google Play® for all Android™ devices.





This thermostat contains a Lithium battery which may contain Perchlorate material. Perchlorate Material—special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate



MERCURY NOTICE: Do not place your old thermostat in the trash if it contains mercury in a sealed tube. Contact the Thermostat Recycling Corporation at www.thermostat-recycle.org or 1-800-238-8192 for information on how and where to properly and safely dispose of your old thermostat.



NOTICE: To avoid possible compressor damage, do not run air conditioner if the outside temperature drops below 50°F (10°C).

Need more help? Visit wifithermostat.com or call 1-855-733-5465 for assistance before returning the thermostat to the store.

Apple, iPhone, iPad, iPod touch and iTunes are trademarks of Apple Inc. All other trademarks are the property of their respective owners.



69-2717-05

Automation and Control Solutions

Honeywell International Inc.
1985 Douglas Drive North
Golden Valley, MN 55422

wifithermostat.com

Honeywell

® U.S. Registered Trademark.
© 2012 Honeywell International Inc.
69-2717—05 M.S. Rev. 07-12
Printed in U.S.A.